


Mobile Transfer Table ULT 550 to BS Rotary 550 Servo

For bridging the flat pile feeder - from offline to inline.

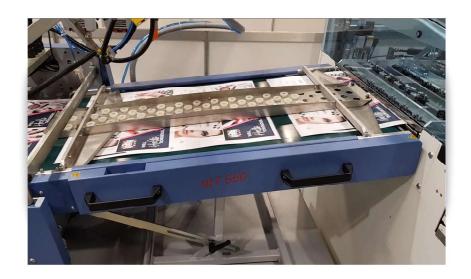



Simple changeover; lower the table, lift the feed head and position the ULT 550



Inline configuration BSR 550 Servo with ULT 550 and cross cutter



Inline configuration BSR 550 Servo with ULT 550 and folding machine or solo feeder

Facts and Figures:

Applications:

Enables inline configuration with

- Cross cutting modules
- upstream folding machines
- solo feeder

Your advantages:

- Connection to upstream machines by bridging the flat pile feeder
- simple changeover from offline to inline production

Technical data:

Control: by BSR 550 Servo

Working width: 550 mm

Height adjustment: 600 bis 950 mm

